Iron Manganese System Guide

ATTENTION!
Not for Single Filter/System

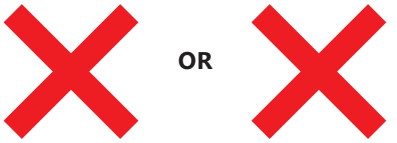

***Iron Manganese Filters require a Sediment Pre-Filter to not clog within a couple of days.**

3-Stage System Setup

1. **How to set up your Iron Manganese CTO / GAC Carbon Filter / System without causing damage to other filters. PLEASE NOTE: Installing with all 3 filters loaded in will cover the CTO filter in Iron Powder, reducing its service life, and pass red finery to your entire home pipes.**

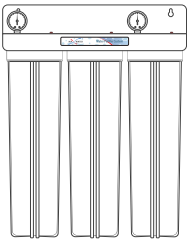

2. **For first-time use, load the sediment filter into the 1st stage housing (right)*, and load the iron manganese filter in the 2nd stage housing (middle). Leave the CTO Filter out.**

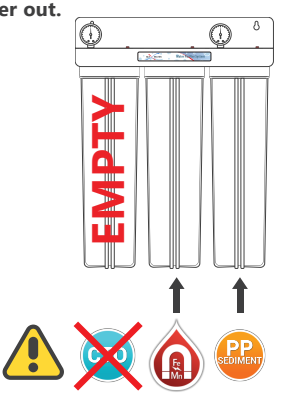

3. **Connect the system to your house and open the mainline 1/2 way for 5 MINUTES opening the nearest faucet to flush out the residue of red finery/powder. Then gradually open the valve to full stream and run for another 5 minutes.**

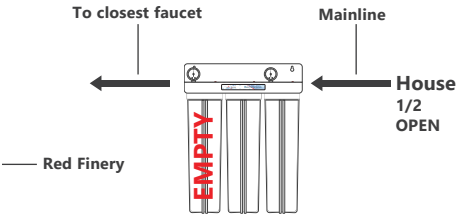

During the water flushing, you can hold down the pressure release buttons to purge any air.

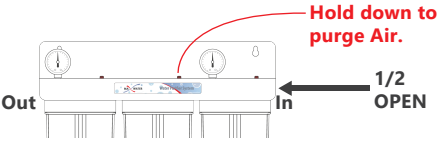

4. **Once water from faucet is clear with no red, STOP the mainline. Install the CTO Filter, then OPEN the mainline again for 5 MINUTES, keeping the nearest faucet open to flush out the residue of Carbon Block Powder.**

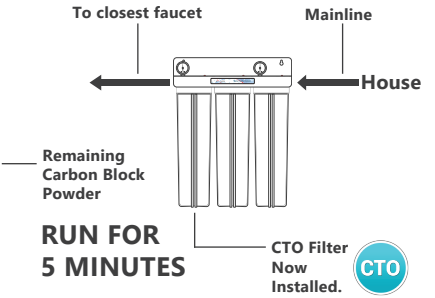

Turn off the faucet, OPEN the Inflowing Valve to full, and your system is fully set up for your entire home use.



*If your system is designed (Left to Right), your Sediment Filter will be on the Left.

NOTE: Max Water is not responsible for any system/filter damages incurred by not following these guidelines.